


08/23/19 7:39:35 AM D:\MY DOCUMENTS\RV\ELECT\ALTERNATOR_CHG.DWG

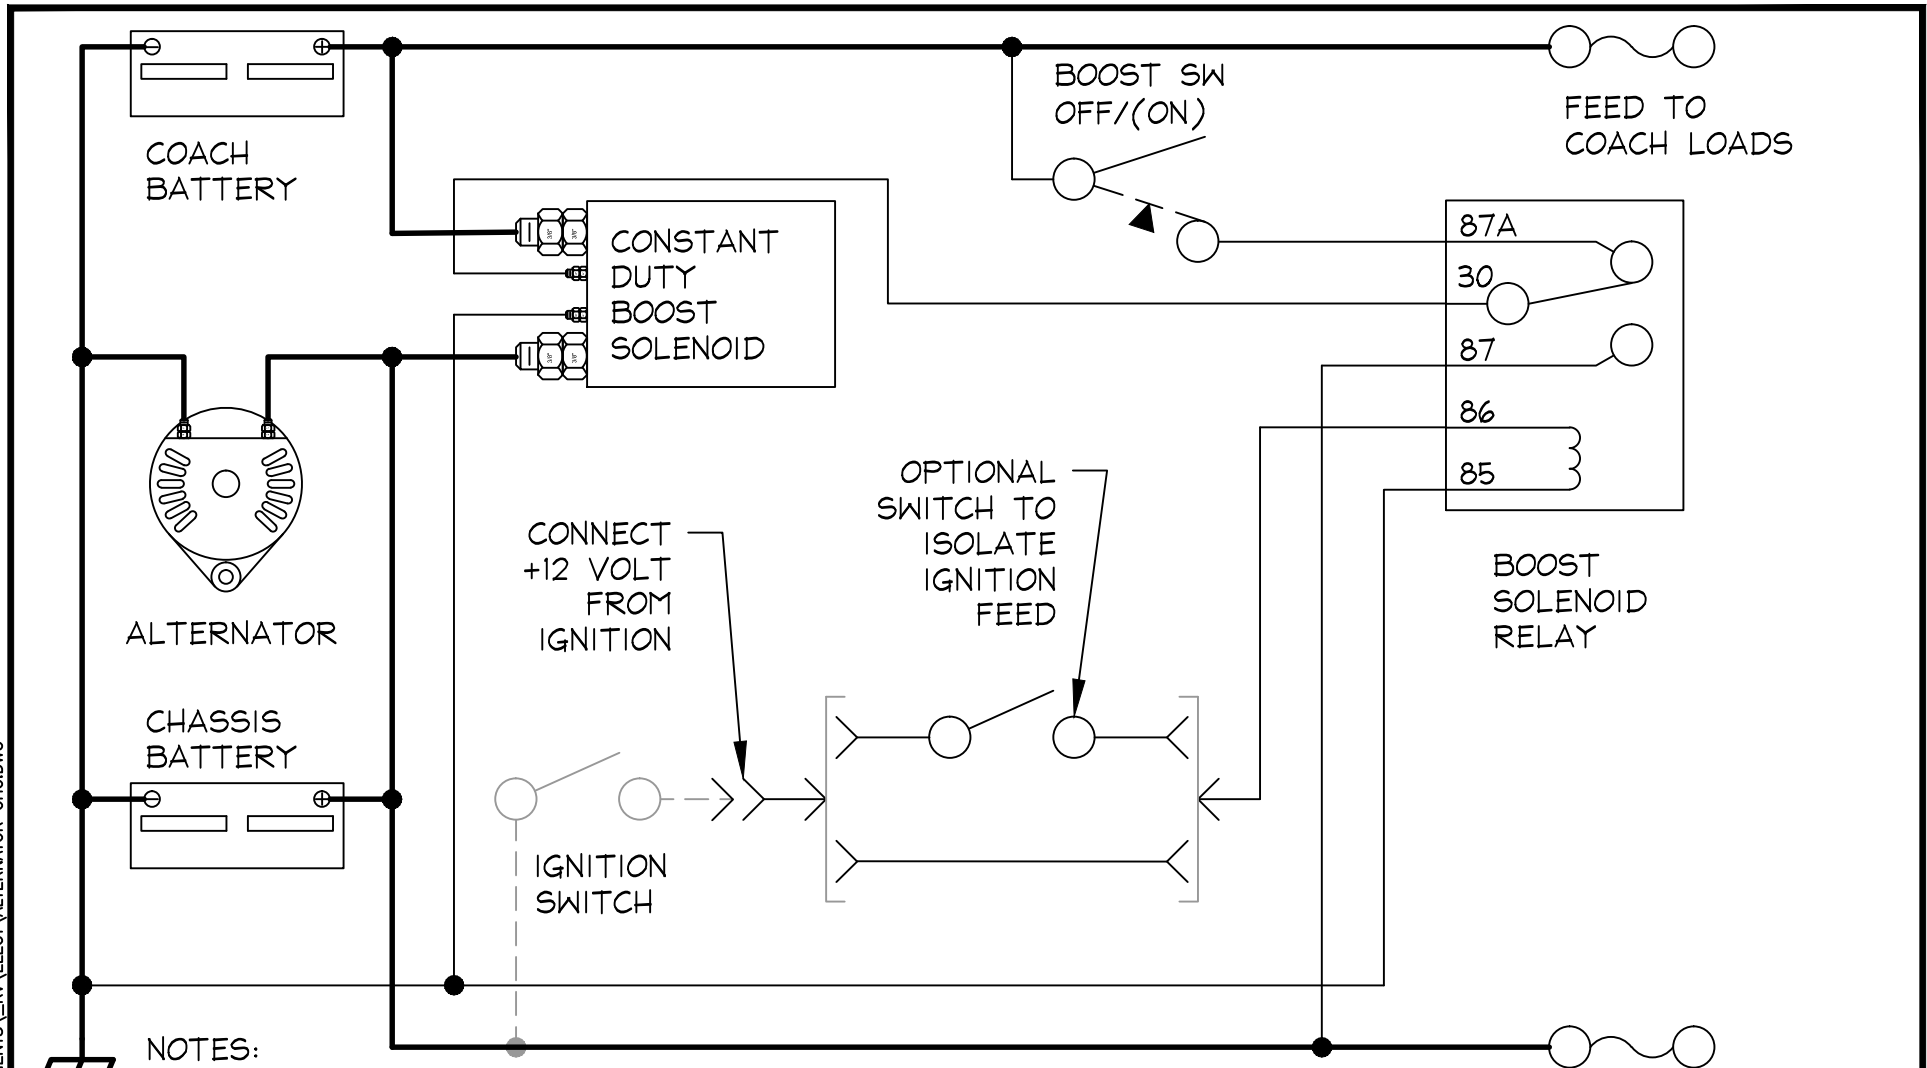

NOTES:

BOOST SW (ON) & Δ = MOMENTARY.
 IF THE ALTERNATOR IS NOT WORKING, PRESSING THE BOOST SW SHOULD LATCH THE RELAY TO USE THE GENERATOR TO CHARGE BOTH BATTERIES WHILE DRIVING.
 IF NORMAL BOOST OPERATION IS POWERED BY THE COACH BATTERY, THE RELAY WILL PREVENT CROSS CONNECTING THE BATTERIES THROUGH THE SWITCH. ADD THE OPTIONAL SWITCH OR TIME DELAY SO THE CIRCUIT WILL NOT CLOSE UNTIL AFTER THE ENGINE IS STARTED.

AUTO ON WITH IGNITION.	SCALE: N/A	PROJECT: BATTERY CHARGE OPTION	TITLE: IGNITION ALTERNATOR CHG CONN
	DRAWN: JIM EXLER	LOC: NAMPA, ID	DRG: ALTCHG5
	DATE: 8/18/19	JOB NO: N/A	REVISION 0