


10/16/17 8:54:45 AM D:\MY DOCUMENTS\RV\ELECT\ALTERNATOR\_CHG.DWG

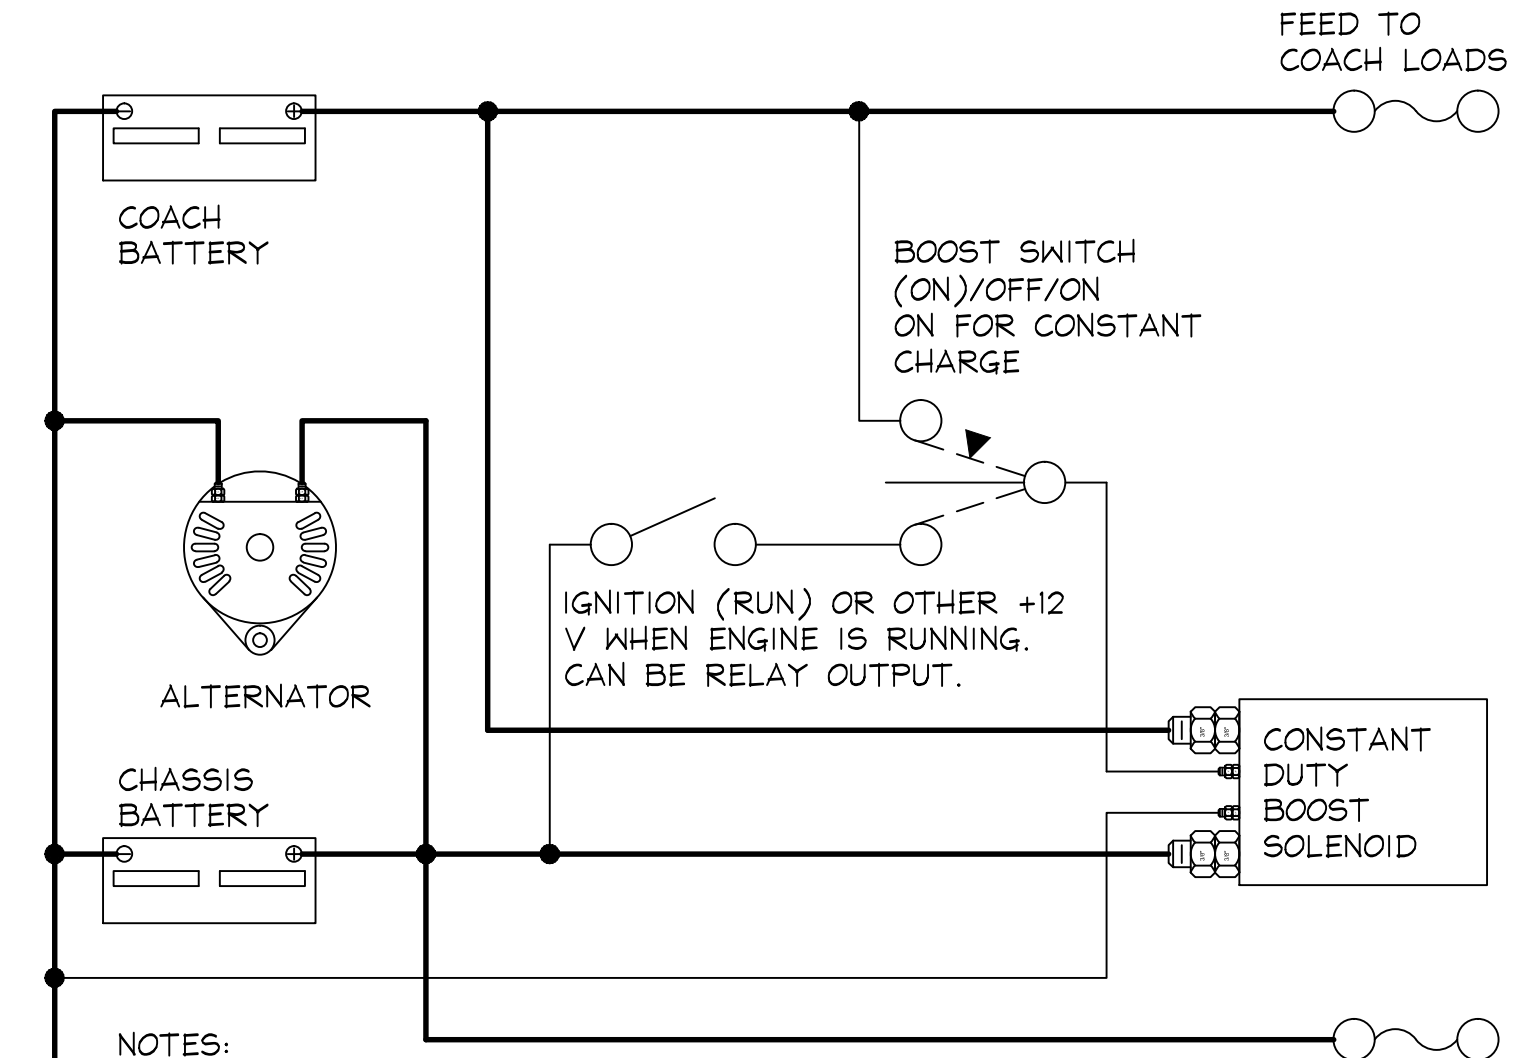

**NOTES:**

BOOST SW (ON) & Δ = MOMENTARY. THIS WILL USE COACH BATTERY TO FIRE BOOST SOLENOID.  
 CONSTANT ON POSITION WILL COMBINE BATTERY BANKS WITH BOOST SOLENOID FOR CHARGING WITH ALTERNATOR WHEN ENGINE IS RUNNING AND WITH GENERATOR IF ALTERNATOR FAILS. USES SPECIAL BOOST SWITCH.

This layout is from my 92 Winnebago	SCALE:N/A	PROJECT:BATTERY CHARGE OPTION	TITLE:MANUAL + ALTERNATOR CHG CONN
	DRAWN:JIM EXLER	LOC:NAMPA, ID	DRG: ALTCHG6
	DATE:10/10/17	JOB NO:N/A	REVISION 0
		Alternator Chg.dwg	