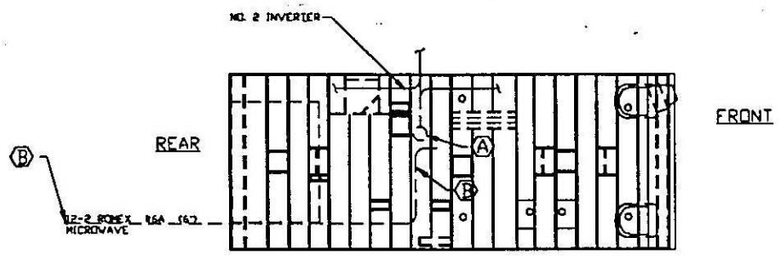

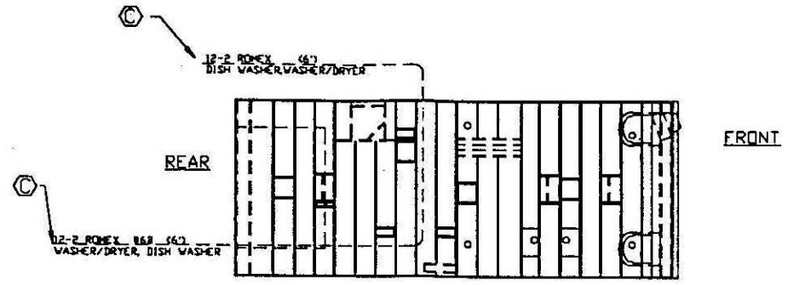

NOMAD PACKAGE

NOTES: (A) ADD A LOOP ON THE INVERTER CIRCUIT FOR THE MICROWAVE RECEPT.

(B) DELETE THE 12-2 MICROWAVE WIRE RUN.

120VAC OPTIONS

WASHER/DRYER

NOTES: (C) ADD THE 12-2 WASHER/DRYER, DISH WASHER WIRE RUN.

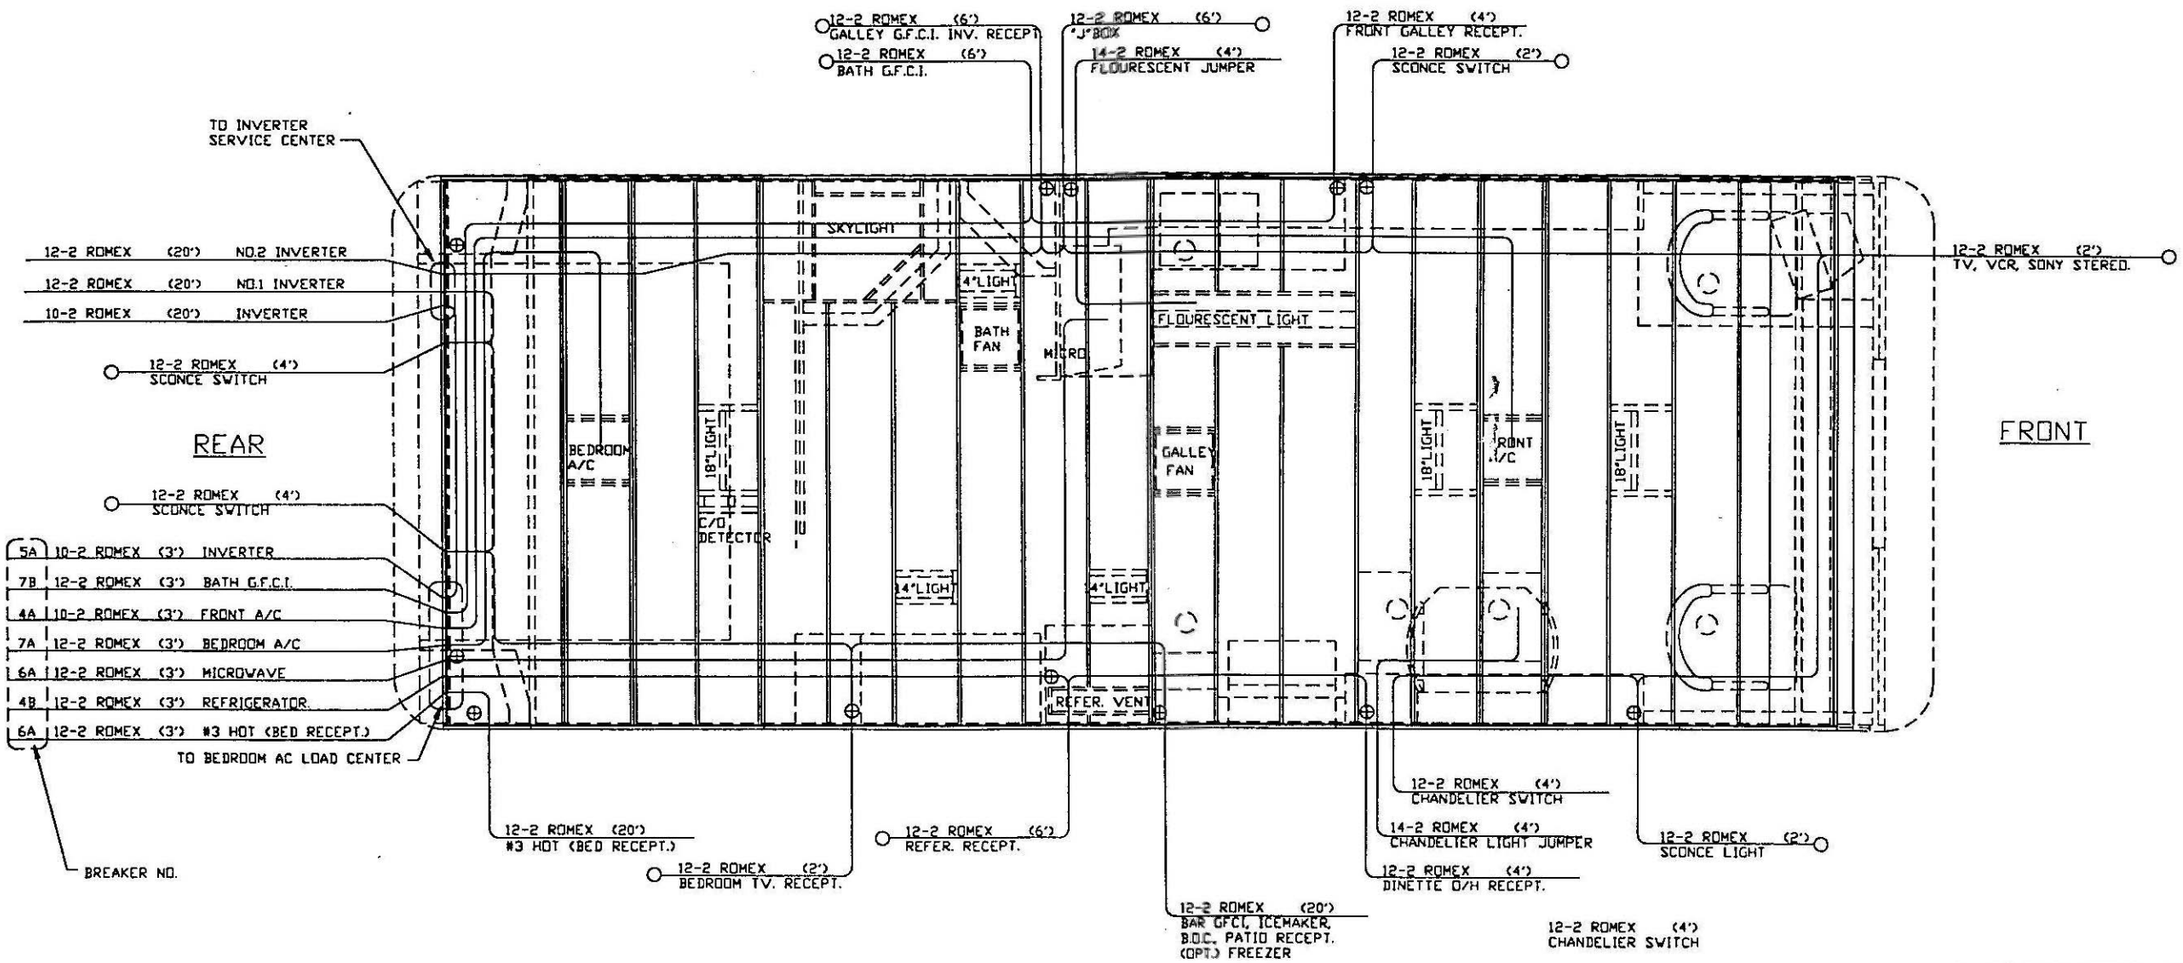

SAHARA EDITIONS

(SIDE DOOR ENTRY)

NOTES:
1. ⊕ INDICATES APPROXIMATE AREA TO LOCATE DRILLING HOLES FOR DROPPING WIRES.
2. (---) DASHED WIRES INDICATES OPTIONAL WIRING.
3. (XX') INDICATES BREAKOUT LENGTH IN FEET FROM DROPPING POINT TO LOOP OR WIRE END.

REV	DATE	WHO	DESCRIPTION
A	5/9/95	KBH	FINALIZED FOR DISTRIBUTION MODEL YEAR 1996.

SAFARI MOTOR COACHES, INC.

120VAC ROOF WIRING DIAGRAM

SCALE: NONE	DISTR: ROOF WIRING	DATE: 12-29-94
1996 3044 SAHARA		DRAWING NO: 025E0307
DRAWN BY: KRH	SIDE DOOR ENTRY	